

ARGAN WOMAN

---



# Curly Straight User Manual



## **CURLY STRAIGHT 2-IN-1 IMPORTANT SAFETY INSTRUCTIONS**

### **READ ALL INSTRUCTIONS BEFORE USING**

Before operating the appliance, especially when children are present, please read these instructions carefully and keep it for future reference.

### **KEEP APPLIANCE AWAY FROM WATER AT ALL TIMES**

### **CAUTION – PRODUCT GETS EXTREMELY HOT AND MAY CAUSE SEVERE BURN IF MIS-USED.**

**DANGER** – the appliance is electrically live even when the switch is off. To reduce the risk of electric shock:

1. **Always unplug the appliance immediately after usage.**
2. **Do not** use while bathing, in the shower or near water.
3. **Do not** place or store appliance where it can fall or be pulled into a source of water.
4. **Do not** place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

### **SAFETY & PRECAUTIONS**

### **WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:**

1. This appliance should never be left unattended when plugged in.
2. **This appliance is hot when in use and immediately after use even when unplugged. Do not** let heated surface touch eyes or skin.
3. Unplug the appliance before cleaning or maintain it. Keep the appliance unplugged when not in use.

4. **This appliance should not be** used by, or near children or individuals with disabilities. If used in the presence of children, close supervision is necessary.
5. Use this appliance only for its intended use, as described in this manual. **Do not** use attachments not recommended by the manufacturer.
6. **Do not** make any modifications that would alter the intended use of the product.
7. **Never** operate this appliance if it has a damaged cord or plug. Have the cord replaced by an authorized technician or refer to the seller for advice.
8. **Keep the cord away from heated surfaces. Do not** twist, bend or wrap line cord around the appliance.
9. **Do not** place the heated appliance on any surface while it is hot or plugged in.
10. **Do not** place the appliance on a soft material or surface such as carpet, bed, couch, towels, etc.
11. **Never** drop or insert object into any opening of the appliance.
12. **Do not** use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
13. **Do not** use an extension cord with this appliance.
14. **Never** use while sleeping.
15. **Do not** use with a voltage converter. Any error when connecting the appliance through a voltage converter can cause irreparable harm not covered by the warranty.
16. **For additional protection:** the installation of a residual current device (RCD) having a rated residual operating current of maximum 30mA is advisable in the electrical circuit supplying the socket. Ask your installer for advice.

**SAVE AND ABIDE BY THESE INSTRUCTIONS AT ALL TIME**

## **FEATURES**

- 2-in-1 styling tool - Automatic Curling Iron & Hair Straightener
- Titanium Barrel & Plates - dimensions: "6.0" (l) by "1.0" (w)
- Tourmaline Technology minimizes heat damage
- Dual Voltage 100V – 240V AC
- Professional Cord Length – 9 feet
- Digital Temperature Reading: LCD Display
- Temperature Speed: 360°F/90S
- 5 Rotation Speed Selection
- Push Button Automatic Rotating Barrel. Left & Right rotating direction
- Rotating Motor
- Temperature Setting: 248°F - 450°F
- Max Temperature Setting: 450°F
- Instant Heating Time: ~ 30 second
- Automatic Shutoff: 60 Minutes

## **GETTING STARTED**

### **CURLING:**

1. Connect the appliance to a standard electrical outlet (100-240V) and press the power button.
2. Select the desired temperature by using the "+" and "-" button to suit your hair type. Indicated temperature on the screen display will appear and the shape displayed above the temperature will blink until selected temperature is reached.
3. Using the "M" button, select the desired rotation speed (1-5). The higher the speed selected, the faster the barrel will rotate.
4. Set the controller on top of the clamp up-wards.
5. Section dry hair evenly, and comb each section before curling.
6. Press the clamp, and place ends of hair section (1" – 1 ½") between the barrel and the clamp.

7. Press the L or R button for the desired curling direction. The barrel will rotate automatically (until button is released) collecting and wrapping the sectioned hair around the barrel.
8. Hold curl for desired seconds (holding time varies from one hair type to another). Press the clamp and pull the appliance downward to release the hair and achieve a perfect curl.

To turn off, press the off button (light on the screen display will turn off). Unplug the appliance to ensure safety.

#### STRAIGHTENING:

1. Connect the appliance to a standard electrical outlet (100-240V) and press the power button.
2. Select the desired temperature by using the "+" and "-" button to suit your hair type. Indicated temperature on the screen display will appear and the shape displayed above the temperature will blink until selected temperature is reached.
3. Set the controller on top of the clamp to the left.
4. Section dry hair evenly, and comb each section before straightening.
5. Press the clamp to split the barrel into two plates, and place hair section (1" – 1 ½") between the split plates.
6. Release the clamp and pull the appliance downwards using an automatic tension to create beautiful straight, shiny hair.

To turn off, press the off button (light on the screen display will turn off). Unplug the appliance to ensure safety.

We recommend the following temperature settings:

Hair Type	Temperature
Delicate, Thin Hair	Low 248F-300F
Normal Hair	Medium 300F-380F
Thick, Coarse Hair	Med-High/Max 390F-450F

## **DUAL VOLTAGE OPERATING INSTRUCTIONS**

This appliance is intended for professional and household use. This appliance has dual voltage and operates at 100-240 volts AC. This appliance automatically adjusts to the proper voltage. Use an adapter plug (not included) with correct configuration, prior to use in outlet.

Safety automatic shutoff: For safety reasons, the appliance automatically switches off after approximately 60 minutes of non-usage.

## **RECOMMENDATION**

- Hair should be untangled, clean and dry.
- Put your Curly Straight on flat surface.
- For best results, use a section of hair (about 1" - 1 ½" wide) and brush it carefully until it is taut. When straightening begin at the scalp; place the hair between the hot plates and pull the appliance downwards to the end of hair section. When Curling begin at the ends; place the hair between the clamp and barrel

and rotate the barrel automatically using the L or R buttons. Press the clamp to release the hair. Repeat the process on other hair sections until desired results are reached.

- Immediately unplug the device after usage. Leave it to cool for a few minutes before putting it away.
- The Curly Straight features tourmaline technology that creates negative ions to condition hair while styling. The hair is heated evenly, making the curling or straightening process much faster, reducing the risk of damage due to reduced heat exposure.
- Curly Straight creates natural-looking hair style of magnificent volume and flawless movement.

## **USER MAINTENANCE INSTRUCTIONS**

Turn off and unplug the appliance before cleaning product build-up. Wait until the heating barrel & plates cool down to room temperature. To remove dirt, use rubbing alcohol on a soft cloth and wipe the barrel & plates gently. **DO NOT SCRUB OR USE OTHER ABRASIVE CLEANERS.**

If the power cord twists as a result of use, gently untangle the cord while the appliance is turned off and unplugged.

**NEVER** allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture. Inspect the cord frequently for damage. Stop use immediately if damage is visible, if unit stops or operates intermittently.

## LIMITED PRODUCT WARRANTY

**THIS WARRANTY DOES COVER:** This Limited Warranty covers **ONLY** mechanical defects in our Products, including replacement of parts and labor. **ALL COVERED PRODUCTS ARE SUBJECT TO A ONE (1) YEAR LIMITED WARRANTY FROM THE DATE OF PURCHASE.** For limited warranty details refer to the enclosed limited product warranty certificate.

